

1/10

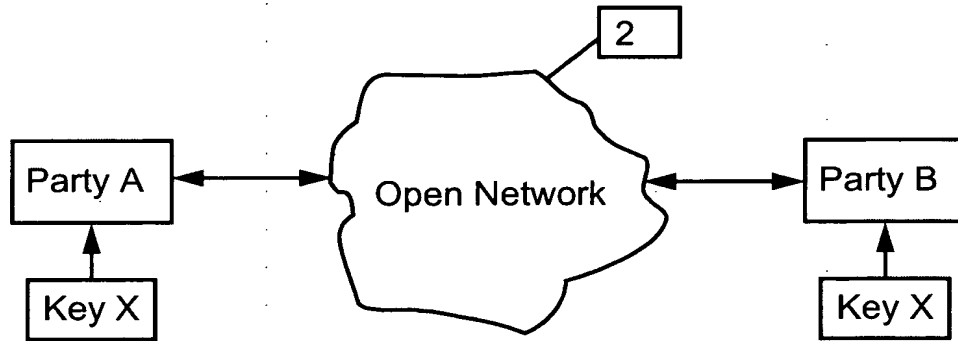


Fig. 1

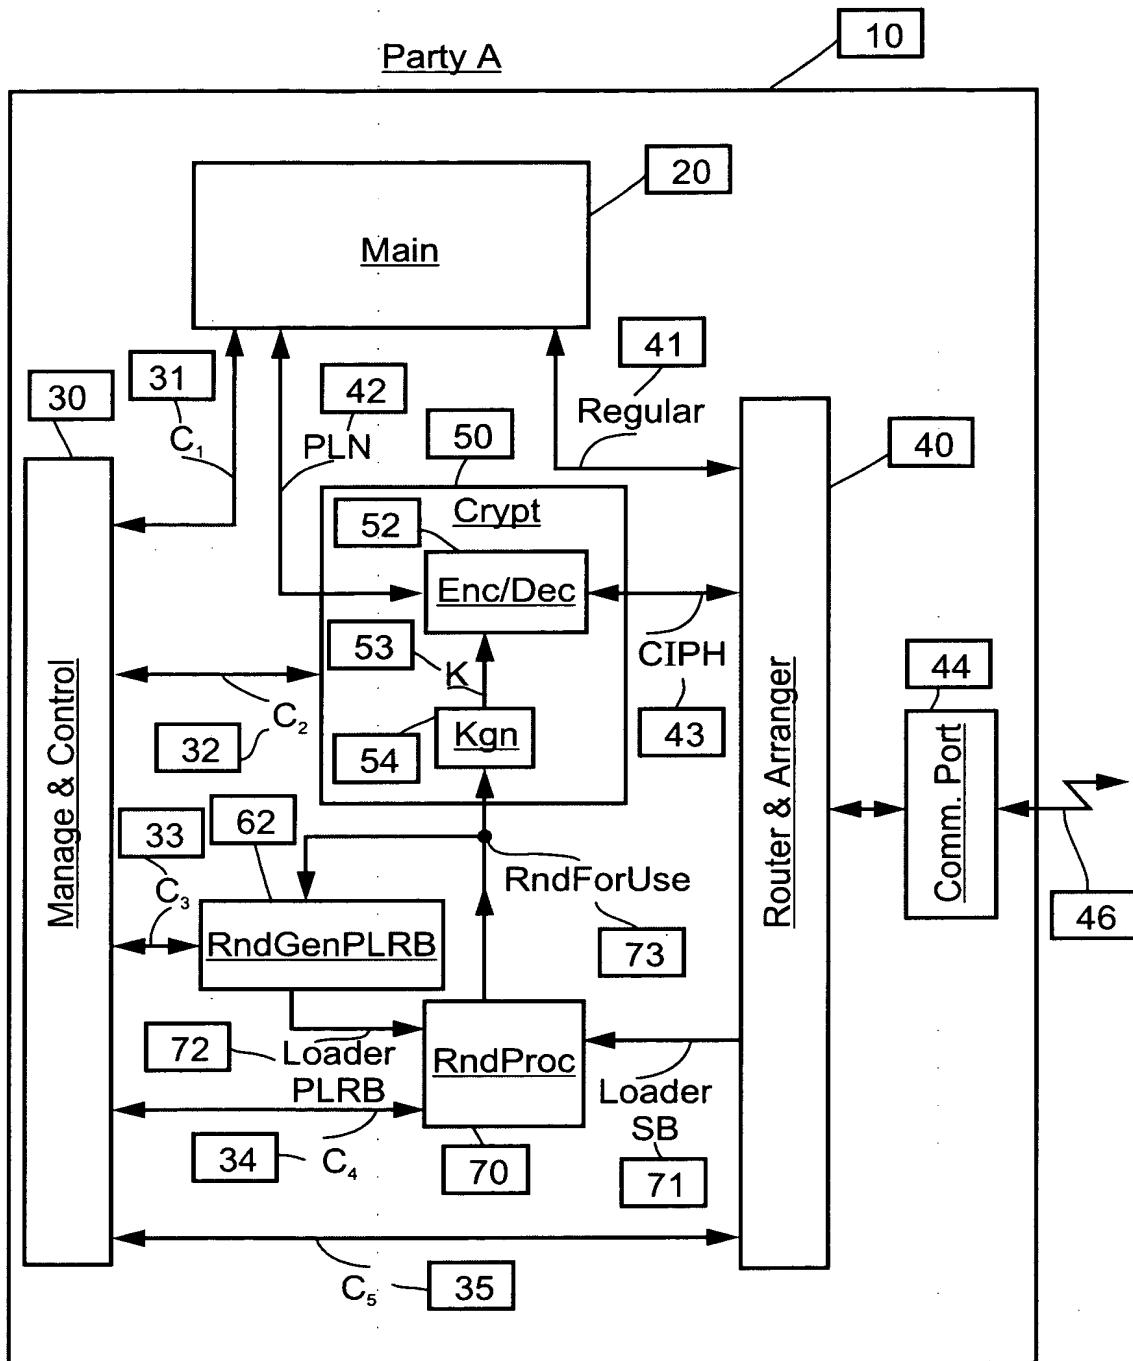


Fig. 2

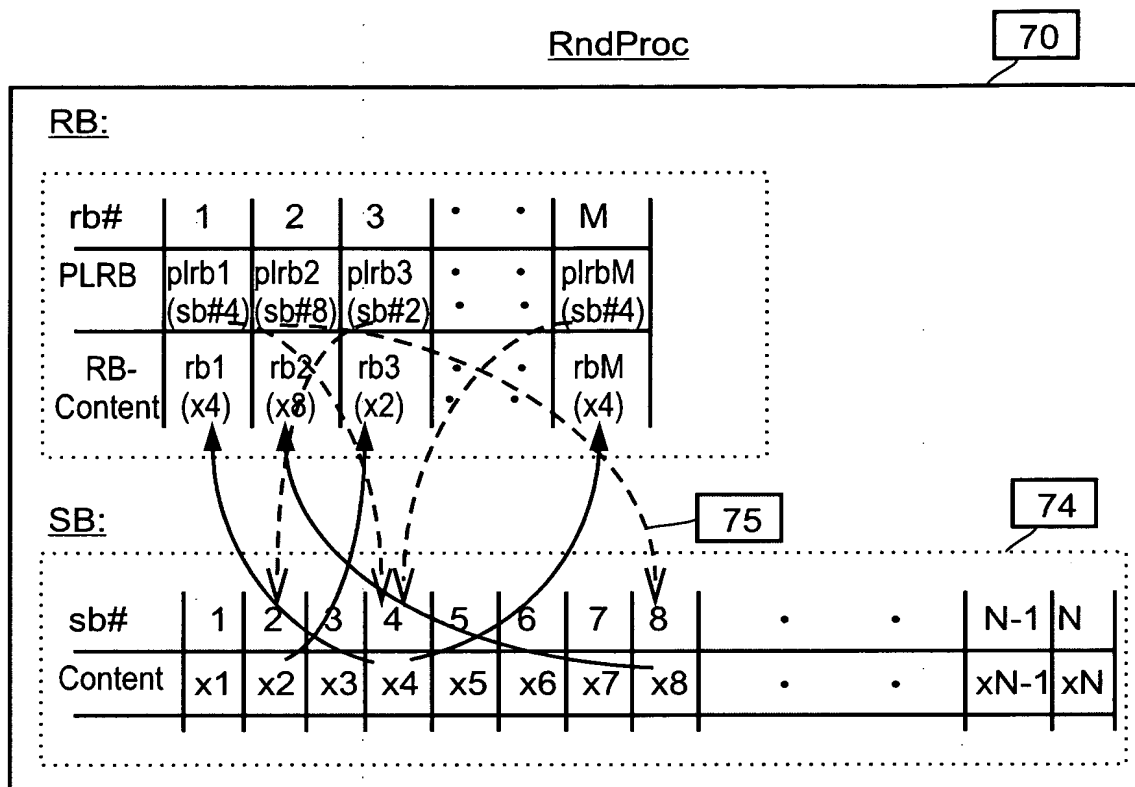


Fig. 3

4/10


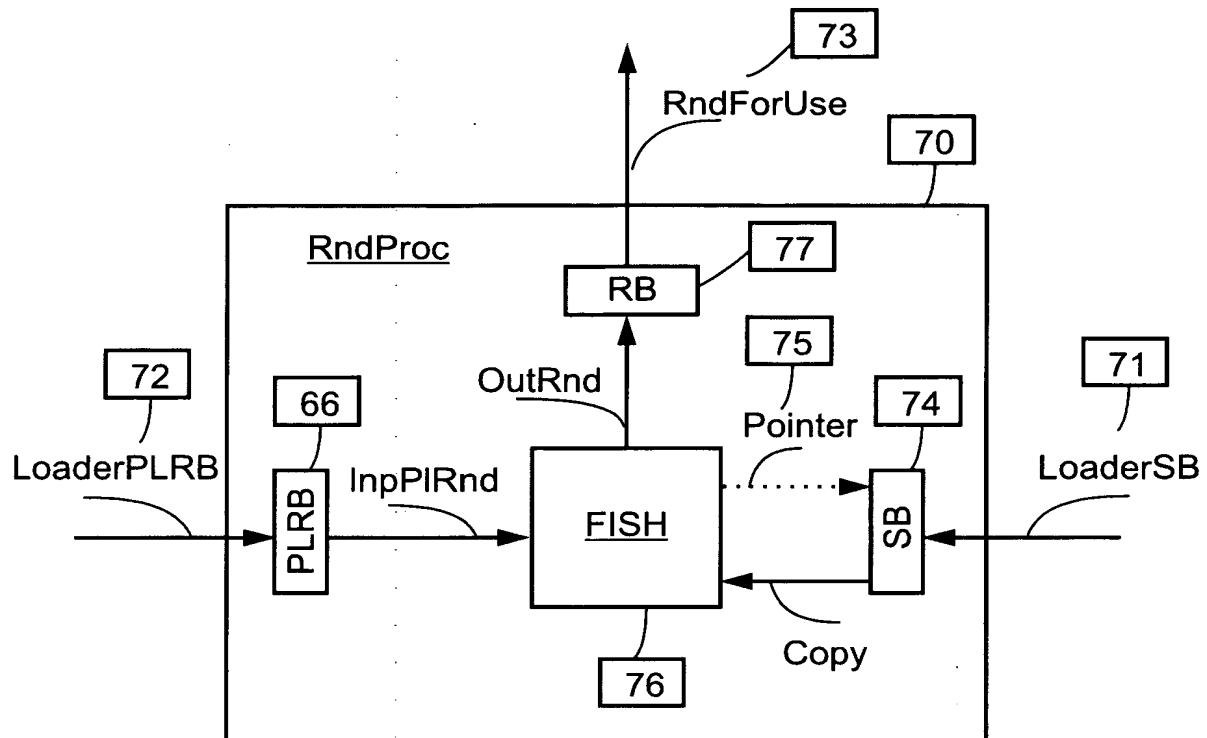


Fig. 4

5/10

RndProci

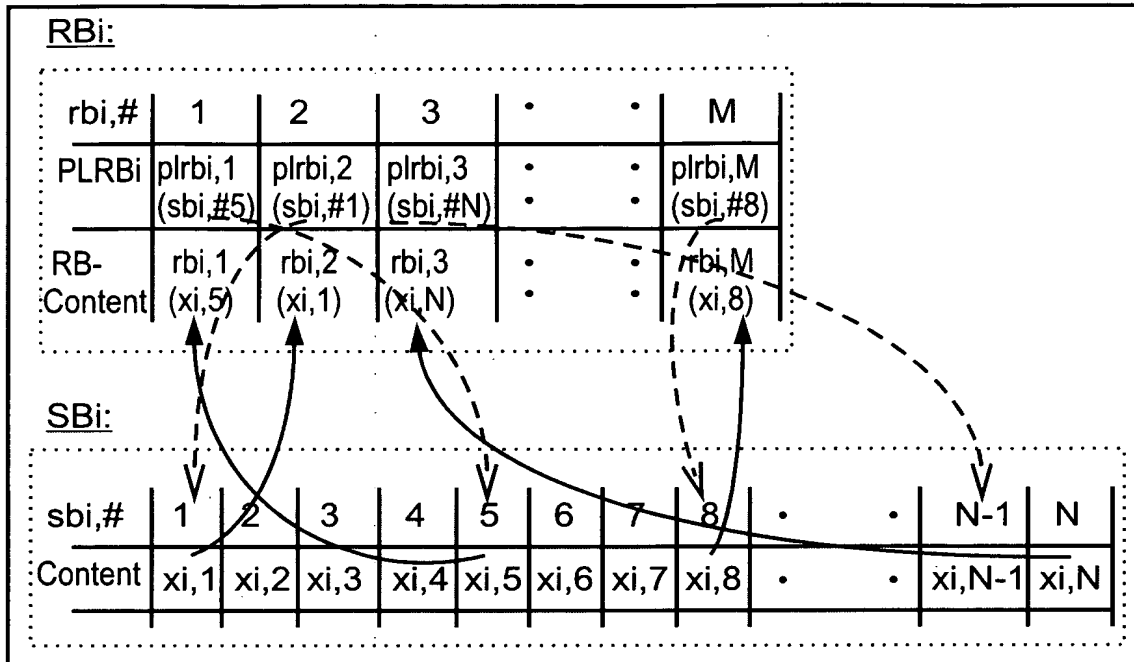

RndProci+1

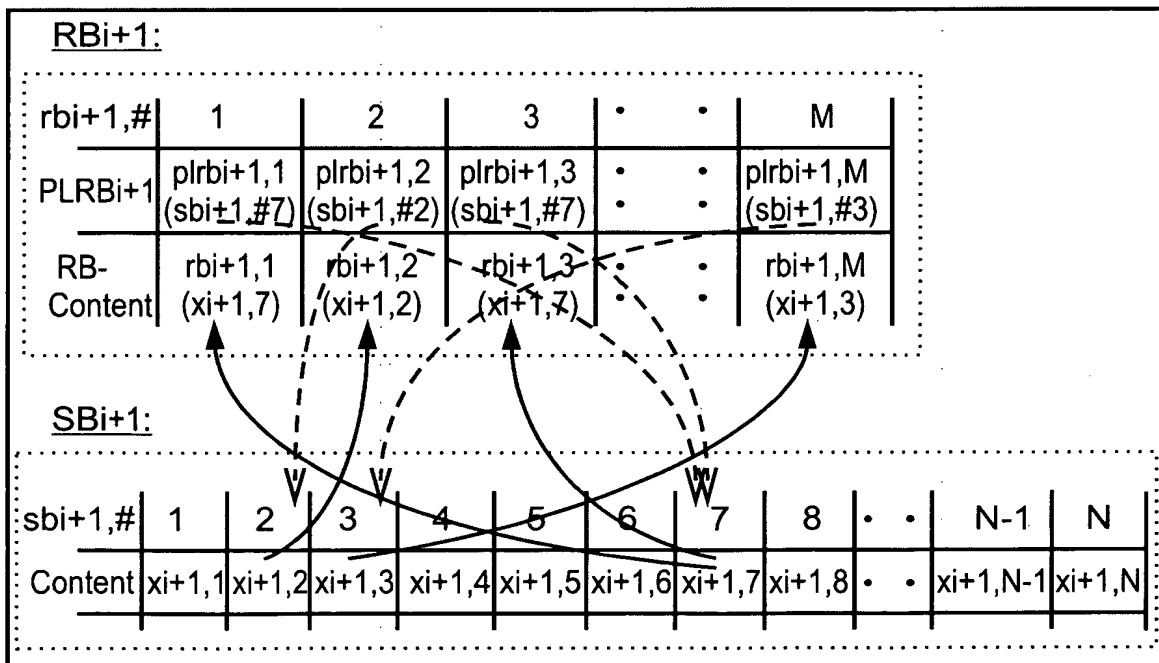


Fig. 5

6/10

10

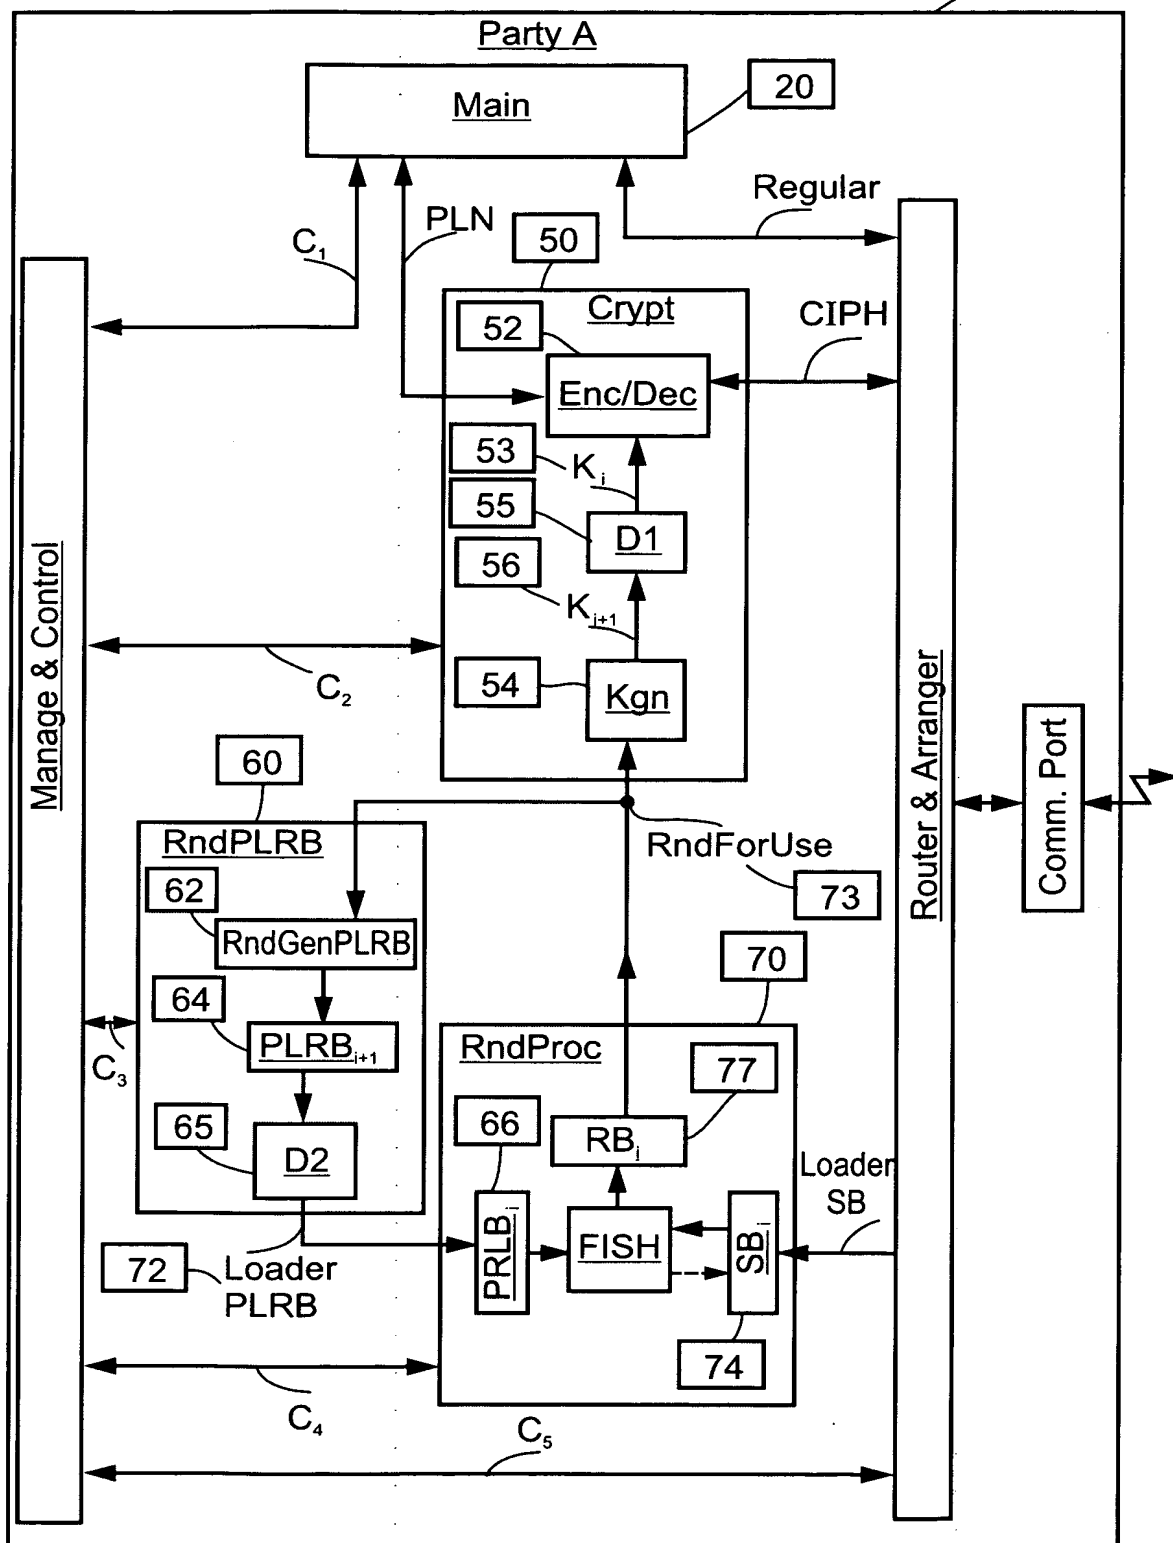


Fig. 6

7/10

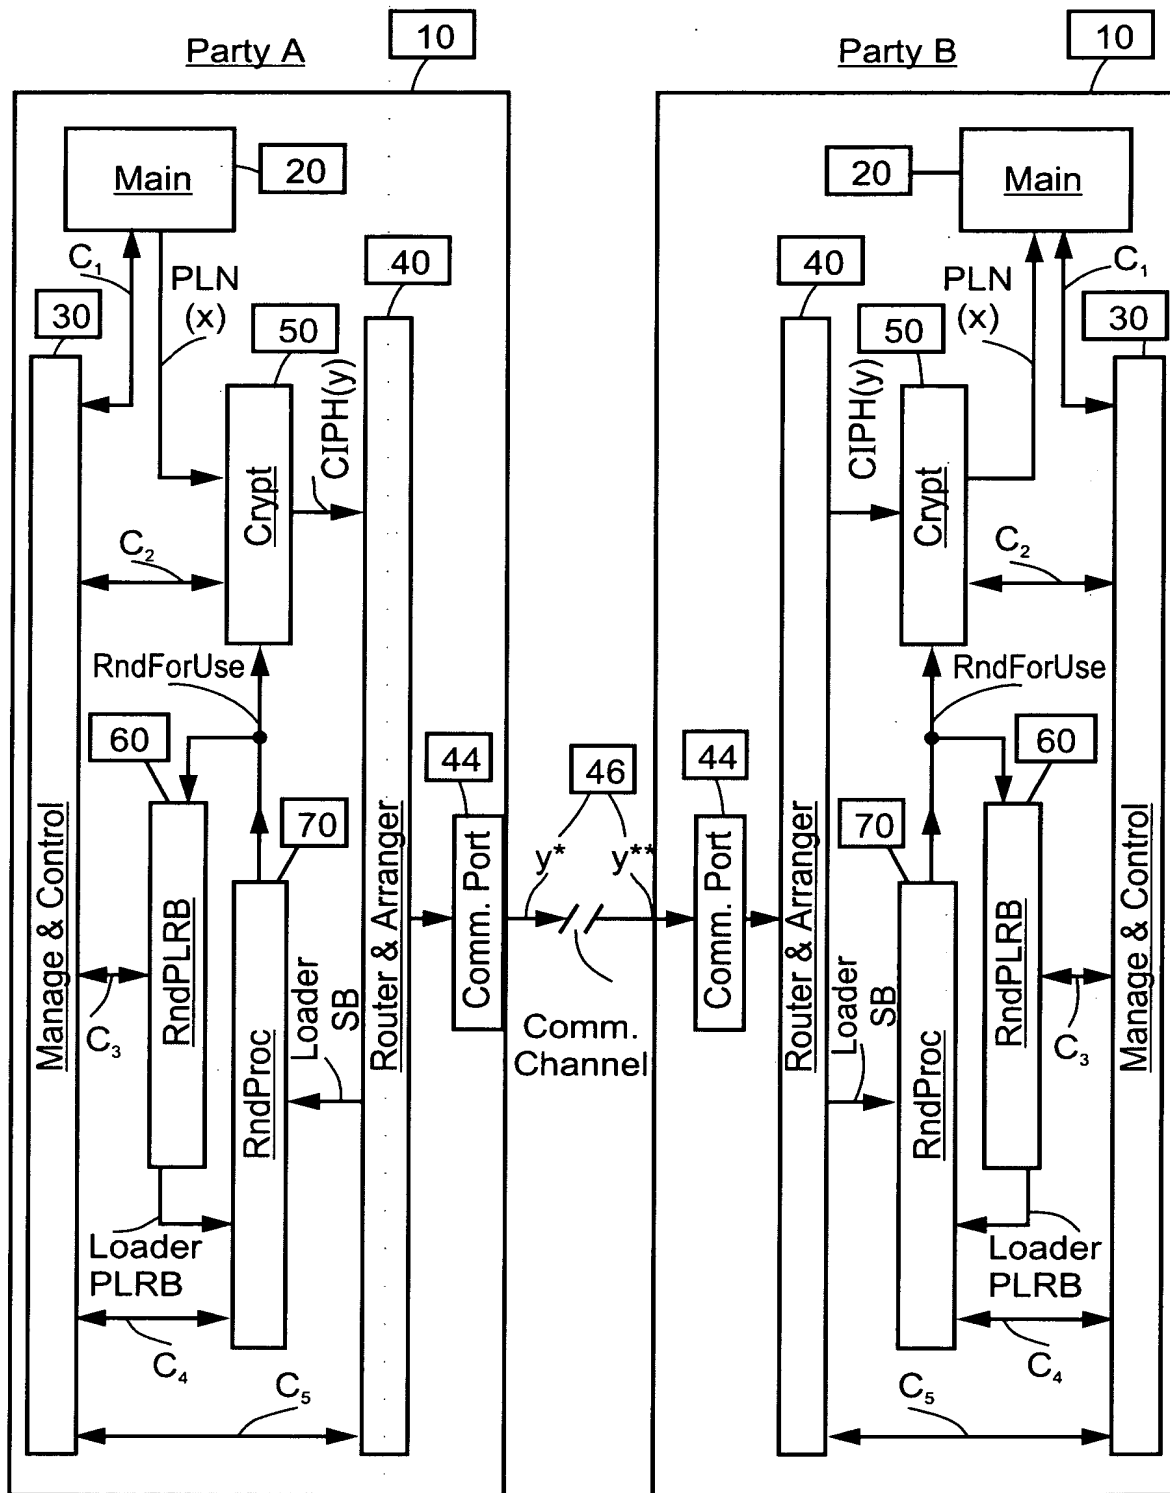


Fig. 7

8/10

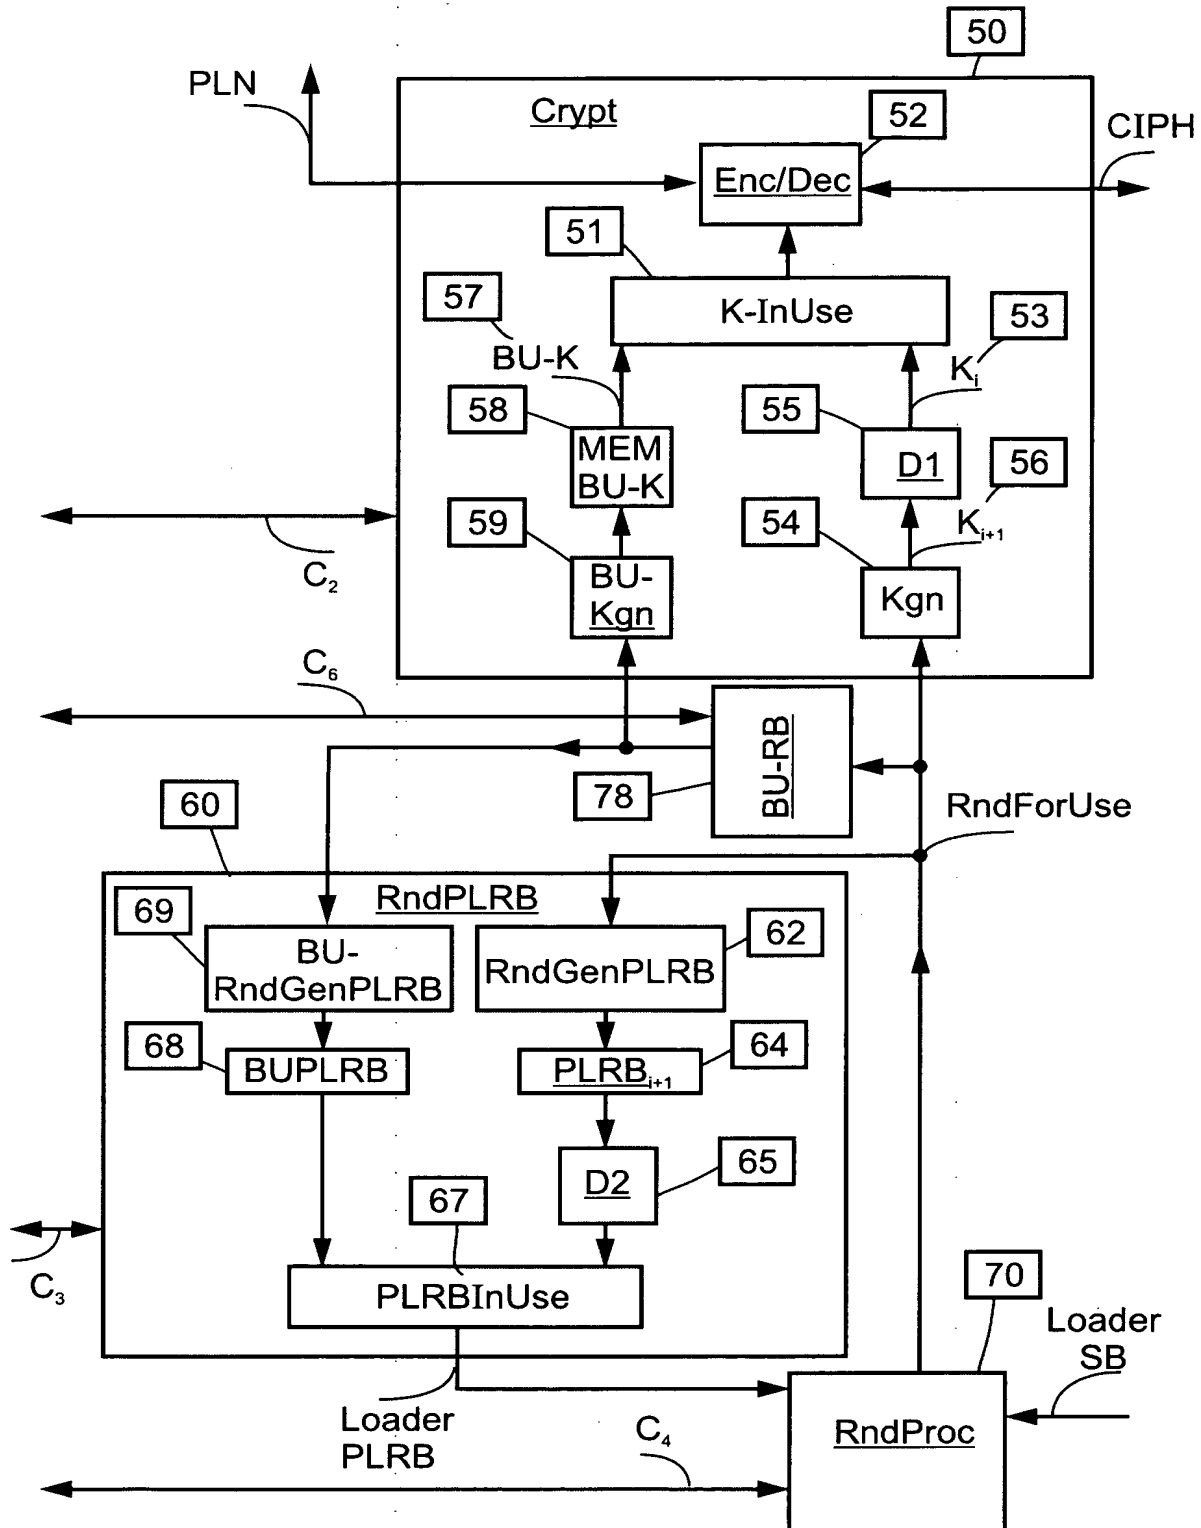


Fig. 8

9/10

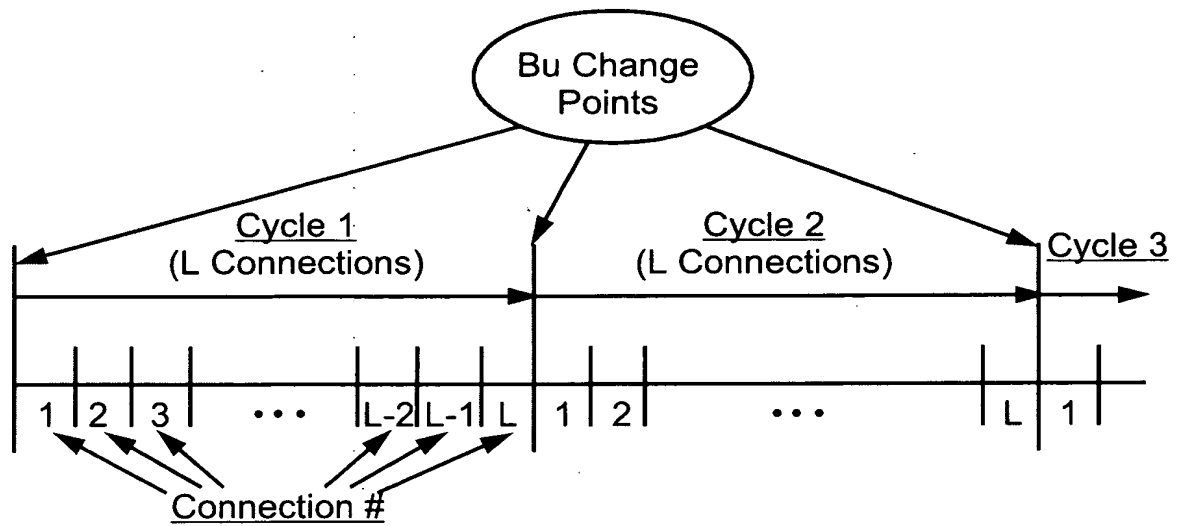


Fig. 9

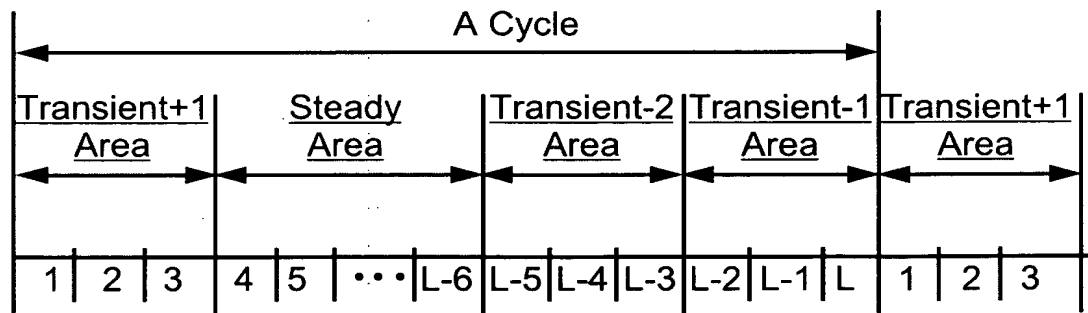


Fig. 10

10/10

Area	BU in Memory	Transmitter		Receiver	
		Control Snt	BU Use	Control Rcv	BU Use
<u>Steady</u>	old	'Old'	'old'	Ignore	'old'
<u>Transient-2</u>	old	'Old'	'old'	'Old'	'old'
				'New'	'new1'
<u>Transient-1</u>	old	'New'	'new1'	'Old'	'old'
				'New'	'new1'
<u>Transient+1</u>	new	'New'	'new'	Ignore	'new'

Fig. 11